

NES-A-JS(USA-1)

NES ADVANTAGE[®]



INSTRUCTION BOOKLET

TABLE OF CONTENTS

Section 1

Page

Consumer Assistance Hotline	1
Connecting the NES ADVANTAGE to the Control Deck	2
Operation of the NES ADVANTAGE	3
Care of the NES ADVANTAGE	4
If the NES ADVANTAGE Does Not Operate	4

Section 2

Page

90—Day Limited Warranty	5
Repairs/Service After Expiration of Warranty	6
Warranties Limitations	6
NES Consumer Parts List & Order Form	7

This official seal is your assurance that Nintendo has reviewed this product and that it has met our standards for excellence in workmanship, reliability and entertainment value. Always look for this seal when buying games and accessories to ensure complete compatibility with your Nintendo Entertainment System.



All Nintendo products are licensed by sale for use only with other authorized products bearing the Official Nintendo Seal of Quality™.

SECTION 1

NES ADVANTAGE INSTRUCTION MANUAL

Congratulations on purchasing the new NES ADVANTAGE joystick, the most advanced joystick available for the NINTENDO ENTERTAINMENT SYSTEM.® It should allow you to get to higher levels, increase your scores, and improve game play.

To play with the NES ADVANTAGE, you need:

- 1) The NINTENDO ENTERTAINMENT SYSTEM.
- 2) Any Nintendo-approved game pak.

(NOTE: The slow motion feature will not work with the Robot or gun series games, and slow motion results may vary with different games.)

NEED HELP?

NINTENDO CONSUMER ASSISTANCE TELEPHONE HOTLINE

1-800-255-3700

4:00 A.M. to 12:00 Midnight (Mon to Sat) 8:00 A.M. to 5:00 P.M. (Sun)

All times are Pacific time.


Hours of operation are subject to change without notice.

PLEASE READ THE SET-UP INSTRUCTIONS CAREFULLY BEFORE ATTEMPTING TO CONNECT THE NES TO YOUR TV SET. IF, AFTER READING ALL SET-UP INSTRUCTIONS, YOU ARE STILL UNABLE TO HOOK UP YOUR SYSTEM, PLEASE CALL OUR CONSUMER SERVICE DEPARTMENT AT THE NUMBER PROVIDED ABOVE.

NINTENDO OF AMERICA INC.

©1988 NINTENDO

CONNECTING THE NES ADVANTAGE TO THE CONTROL DECK

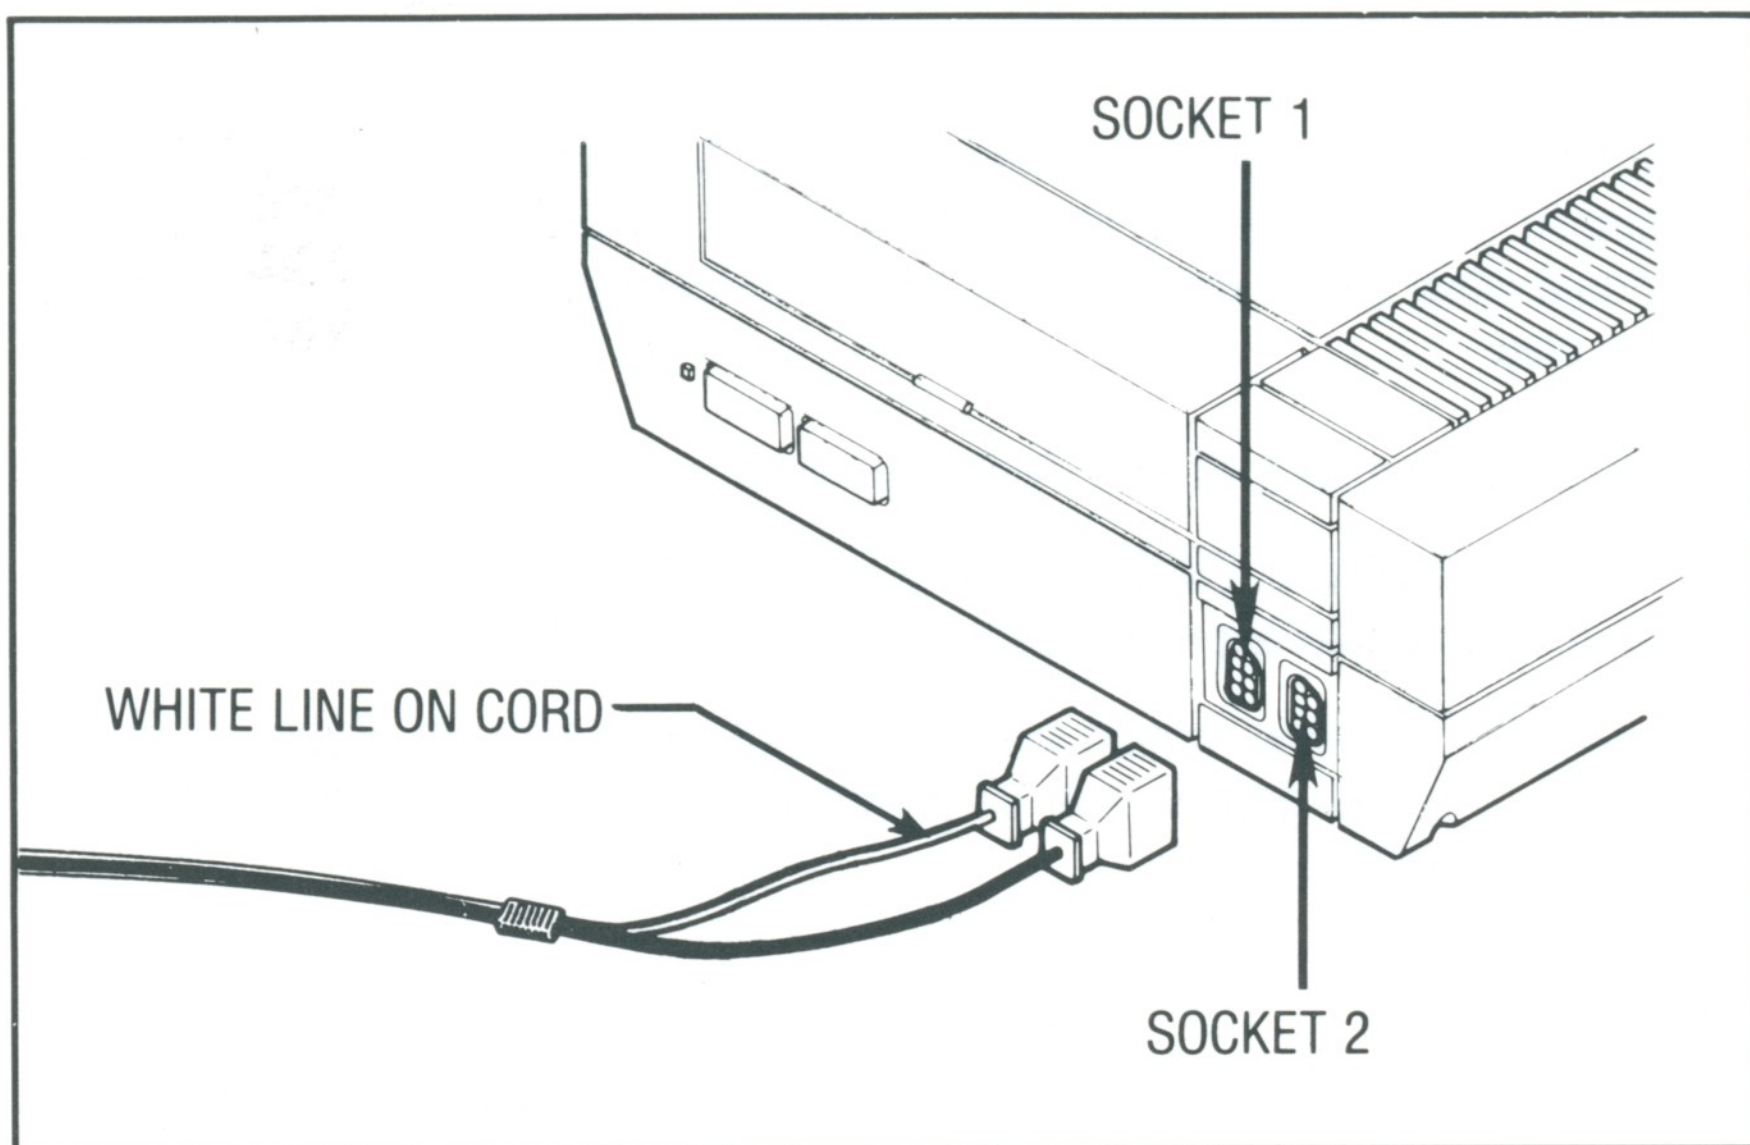

■ **IMPORTANT** —

Insert connector with white stripe on cord into controller socket #1

Insert remaining connector into socket #2


For simultaneous two-player games like **BASEBALL**, use one of the NES game controllers for the second player. Or another NES Advantage Joystick.

Connecting two **NES ADVANTAGE** joysticks:

Insert the first joystick's connector with the white stripe on its cord into controller socket #1.

Insert the other joystick's connector with the unstriped cord into controller socket #2.

OPERATION OF THE NES ADVANTAGE

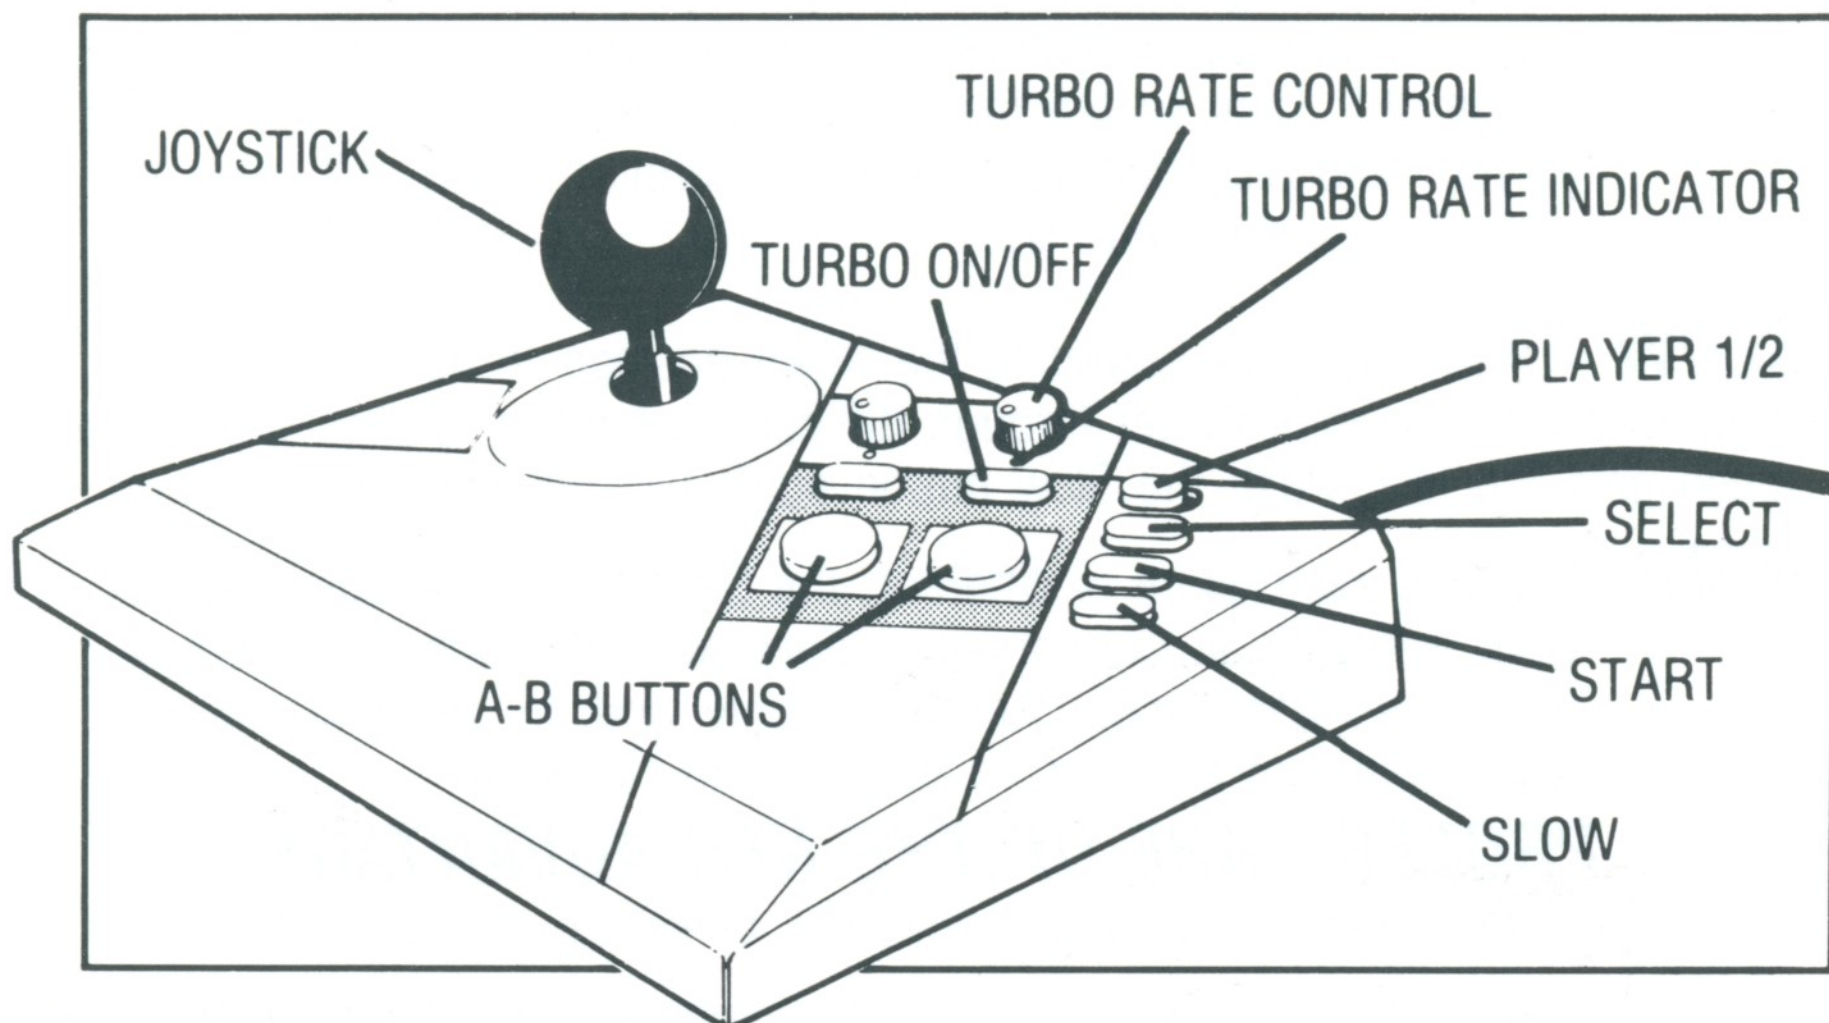

JOYSTICK — Works the same as the control pad on the NES game controllers.

TURBO RATE CONTROL — The NES Advantage Joystick is equipped with adjustable “Turbo” controls which work like an automatic “Rapid Fire”. To activate the Turbo feature for either the A or B button, first push the Turbo On/Off button to the Down position (press again to turn off in the Up position.) Then hold the A or B button Down and adjust the Turbo rate while playing a game. The Turbo rate indicator will flash according to the rate. For best results, adjust the Turbo rate control for each game being played.

SELECT AND START — Works the same as on the NES game controllers.

PLAYER 1/2 SWITCH — On most games, two players can share the NES Advantage Joystick. Put the Player 1/2 switch to “1 Player” while the first player plays. When the game turn ends, flip the switch to “2 Player” and the second player can then use the Joystick.

NOTE: For simultaneous 2 player games like Baseball or Mario Bros., use one of the controllers that comes with the NES for the second player. Plug the NES Advantage into socket #1 using only the plug with the white line, and set the Player 1/2 switch to “1 Player”. Then plug the controller into socket #2.

NOTE: If you are using two NES Advantage Joysticks switch one to “1 player” and plug the connector with the white cord into controller socket #1. Then switch the second NES Advantage Joystick to “2 Player” and plug that Joystick into controller socket #2 using the plug without the white line.

SLOW — Push the Slow button to the Down position to activate the Slow Motion. Use this feature to get through difficult portions of games where the action gets too fast. Push the Slow button again (Up position) to turn it off.

NOTE: Because each game is different, the Slow Motion feature may not work well with all the games. It does not work with the Robot or Gun Series game paks. And it will only work for the first player while switching between “1 player” and “2 player.”

PROPER CARE OF THE NES ADVANTAGE

Avoid exposure to high temperature, humidity, or severe shocks.

Keep in a clean, dry place. Water or foreign substances in connector or joystick will adversely affect operation.

Use a soft damp cloth to remove any stains. Do not use abrasives, alcohol or solvents to clean.

When disconnecting the NES Advantage from the Control Deck, grasp the connector and pull. Do not pull on the cord as damage may result.

TROUBLESHOOTING

<i>SITUATION:</i>	The joystick doesn't work at all.
--------------------------	-----------------------------------

<i>POSSIBILITY:</i>	The connectors may not be properly connected. The connectors may be in the wrong sockets. The 1P/2P switch may be set incorrectly. Try both positions.
----------------------------	--

<i>SITUATION:</i>	Rapid fire (Turbo) is not working.
--------------------------	------------------------------------

<i>POSSIBILITY:</i>	The game may not be working. Turbo rate may not be adjusted properly. Turbo feature may not be turned on.
----------------------------	---

SECTION 2

90-DAY LIMITED WARRANTY

90-DAY LIMITED WARRANTY

Nintendo of America Inc. ("Nintendo") warrants to the original purchaser that this product shall be free from defects in material and workmanship for a period of 90 days from the date of purchase. If a defect covered by this warranty occurs during this 90-day warranty period, Nintendo will repair or replace the product or component part, at its option, free of charge.

WARRANTY SERVICE

To receive this warranty service:

- 1) **DO NOT** return your product to the retailer.
- 2) Please call Nintendo's **WORLD CLASS SERVICEsm** Center at 1-800-255-3700. Our hours of operation are from 4:00 am to Midnight, Pacific Time Monday through Saturday, and from 8:00 am to 5:00 pm, Pacific Time Sundays (times subject to change). If the Nintendo Service Representative is unable to solve the problem over the telephone, you will be referred to the nearest Nintendo **WORLD CLASS SERVICEsm** location for prompt, professional warranty service.

To satisfy the needs of our customers, Nintendo maintains a nationwide network of **Authorized WORLD CLASS SERVICEsm CENTERS** located in major metropolitan areas and also offers express factory service. In some instances it may be necessary to ship the complete product, **FREIGHT PREPAID AND INSURED FOR LOSS OR DAMAGE** to the nearest service location.

This warranty shall not apply if the product has been damaged by negligence, accident, commercial use, unreasonable use, modification, tampering, or by other causes unrelated to defective materials or workmanship. This warranty shall not apply if any product serial numbers have been altered, defaced, or removed.

WARRANTY LIMITATIONS

ANY APPLICABLE IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY LIMITED TO NINETY DAYS FROM THE DATE OF PURCHASE AND ARE SUBJECT TO THE CONDITIONS SET FORTH HEREIN. IN NO EVENT SHALL NINTENDO BE LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES RESULTING FROM THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTIES.

The provisions of this warranty are valid in the United States only. Some states do not allow limitations on how long an implied warranty lasts or exclusion of consequential or incidental damages, so the above limitation may not apply to you. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

REPAIR/SERVICE AFTER EXPIRATION OF WARRANTY

To receive service after the expiration of your warranty:

- 1) Please call Nintendo's **WORLD CLASS SERVICEsm** Center at 1-800-255-3700. Our hours of operation are from 4:00 am to Midnight, Pacific Time Monday through Saturday, and from 8:00 am to 5:00 pm, Pacific Time Sundays (times subject to change). If the Nintendo Service Representative is unable to solve the problem over the telephone, you will be referred to the nearest Nintendo **WORLD CLASS SERVICEsm** location for prompt, professional repair and replacement components.

To satisfy the needs of our customers, Nintendo maintains a nationwide network of **Authorized WORLD CLASS SERVICEsm CENTERS** located in major metropolitan areas and also offers express factory service. In some instances it may be necessary to ship the complete product, FREIGHT PREPAID AND INSURED FOR LOSS OR DAMAGE to the nearest service location.

NES ADVANTAGE CONSUMER PARTS LIST & ORDER FORM

Nintendo Part No.	Part Name	Price	Quantity	Amount of Purchase
5581	JOYSTICK KNOB	3.00		
5582	TURBO RATE ADJUSTMENT KNOB	1.00		
6740	ADVANTAGE INSTRUCTION MANUAL	1.75		
SUBTOTAL				
WASHINGTON STATE RESIDENTS ONLY ADD 8.1% SALES TAX				
POSTAGE & HANDLING (\$2 for orders of \$4 or more, 50¢ for orders of less than \$4)				
TOTAL AMOUNT DUE				

To Order By Phone (Requires VISA or MASTERCARD)
Call: 1-800-255-3700, 4:00 A.M. to 12:00 Midnight Monday through
Saturday and 8:00 A.M. to 5:00 P.M. on Sunday. (All times are Pacific time.
Hours of operation are subject to change without notice.)
Please have your VISA or MASTERCARD card number and expiration date ready.

To Order By Mail

1. Please complete the following:
- Name _____ Phone (_____) _____
- Street Address _____
- City _____ State _____ Zip _____
2. **Enclose Money Order or Credit Card Authorization for total amount due.**
- If paying by VISA or MASTERCARD:
- Please charge total amount due of \$ _____ to my:
- (VISA OR MC?) _____ Expiration Date _____
- CARD # _____
- Name on Card (Print) _____
- SIGNED _____

3. Mail to: Nintendo of America Inc.
P.O. BOX 97032, Redmond, WA 98073-9732

Allow 6-8 weeks for delivery. We cannot accept cash, or C.O.D. orders.
Prices are applicable within the United States only and are subject to
change without notice.

Need help with installation,
maintenance or repairs?
Call 1-800-255-3700.



Nintendo of America Inc.
P.O. Box 957, Redmond, WA 98073-0957 U.S.A.

PRINTED IN TAIWAN